

---

# Service Bulletin

---

MOTORCYCLE DIVISION

4-STROKE  
BULLETIN VS/VX/VZ/VL NO. 39  
DATE: 4/27/2006

**SUBJECT:** OWNER'S MANUAL CORRECTION - SUSPENSION ADJUSTMENT

**MODEL:** VZR1800K6

**REFERENCE:** VZR1800K6 OWNER'S MANUAL (PN 99011-48G50-03A)  
Page 3-19

**NOTICE:**

This bulletin contains corrected information for the 2006 model VZR1800K6 Owner's Manual. There is a procedure in the Owner's Manual for adjusting the rear suspension spring pre-load that mentions an adjuster provided in the tool kit. This adjuster is not provided in the tool kit.

Delete the phrase "with the adjuster provided in the tool kit" where it appears on Page 3-19 in the manual and add a note describing how to obtain the adjuster (see page 2 of this bulletin). Please update the unsold VZR1800K6 Owner's Manuals per the instructions in this bulletin.

**AFFECTED DEPARTMENTS:**

The following departments in your dealership should be notified of this information:

Management    Service    Warranty    Sales    Parts    Accessories

American Suzuki Motor Corporation  
Technical Service Department  
Motorcycle / ATV


## SUSPENSION ADJUSTMENT

### REAR SUSPENSION

#### Spring Pre-load Adjustment

The rear suspension spring pre-load is adjustable to compensate for the rider, load, riding style and road conditions. The spring pre-load is adjustable to seven positions. To change the spring pre-load setting, follow the procedure below.

1. Place the motorcycle on the side stand.

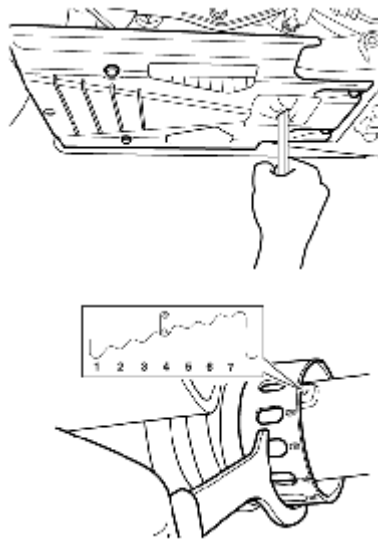

2. Twist the spring tension ring to the desired position ~~with the adjuster provided in the tool kit~~. Position 1 provides the softest spring tension and position 7 provides the stiffest. This motorcycle is delivered from the factory with its adjuster set on position 4.

← Delete "with the adjuster provided in the tool kit"

Note: Use a hook spring type adjuster or Suzuki spring adjuster (Part Number 09822-00003) to adjust the rear suspension spring. The Suzuki spring adjuster is available from your Suzuki dealer.

← Add note